


DRAIN DETAIL - PVC COATED ALUMINUM DECK DRAIN

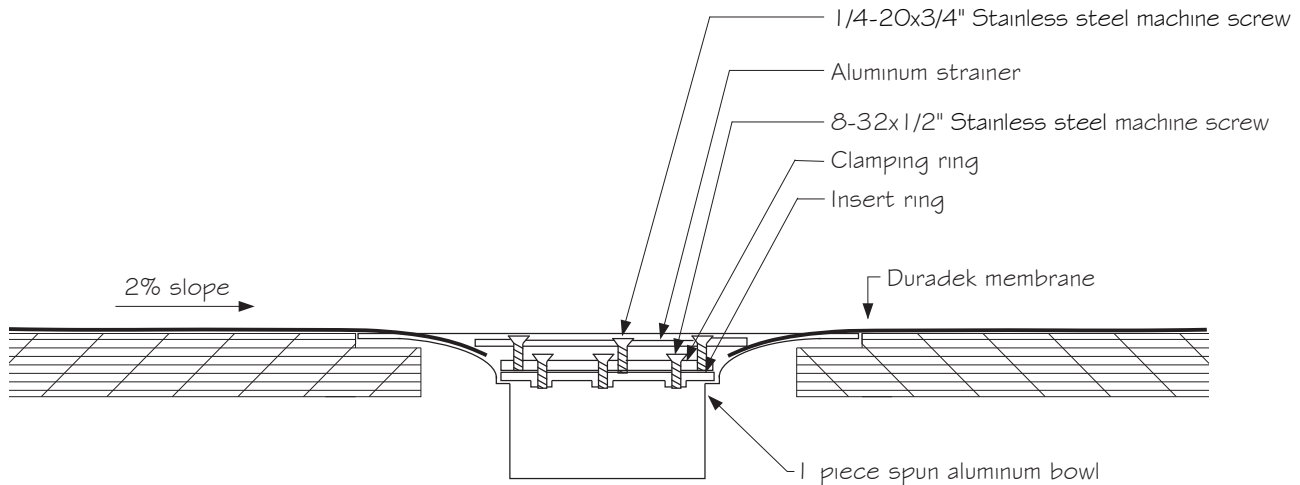

Installation Notes:

- Drain to be countersunk into plywood deck approximately 1/8"
- Drain body is attached to plywood with 6 x #8 x 1 1/2" screws (or roofing nails). Countersink screw heads with 3/8" high speed countersink drill bit (nic). File off burs (on back side) created from drilling process.
- Attach drain body to drain pipe with "M-J" coupling (nic). Coupling available in stepped sizes for attachment to both larger and smaller diameter drain pipes. (By others)
- Duradek deck membrane is hot air welded to entire PVC coated drain body flange and then into bowl. Avoid glue on back of membrane at drain location. (Glue can be scrapped off PVC backed membrane only with nozzle of hot air gun).
- Install drain cover with (3) screws supplied.

NOTE:

AS A SUPPLIER OF FINISHED PRODUCT ONLY, DURADEK DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING, OR DIMENSIONS. THE ARCHITECT, ENGINEER, SPECIFIER, CONTRACTOR OR OWNERS' REPRESENTATIVE MUST VERIFY ALL DIMENSIONS, SIZES, AND SUITABILITY OF DETAILS, AND ARE IN ACCORDANCE WITH GOVERNING BUILDING CODES.

DURADEK LTD.

CANADA
UNITED STATES

Bus: (604) 591-5594
Bus: (816) 421-5830

Fax: (604) 591-3100
Fax: (816) 421-2924

SYSTEM:
ALL ASSEMBLIES

DATE: 22/05/19
REV. DATE.

DRAWING No.:
DR-02 - Alt B